 



Universal 12 Volt Outlet

Fits BMW style outlet when ring is removed
Fits cigarette lighter outlet when ring is in place


1. Remove adaptor ring
2. Loosen split screw nut only

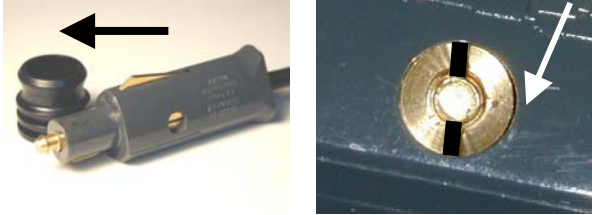

 3. DO NOT LOOSEN SLOTTED SCREW
4. Gently separate plug halves. Do not misplace the split nut!
5. Strip wires $\frac{1}{8}$ "; solder or tin wire strands if desired
6. Strain relief (wire opening) is adjustable. If small strain relief is desired, slide rubber flange onto both wires **FIRST**.

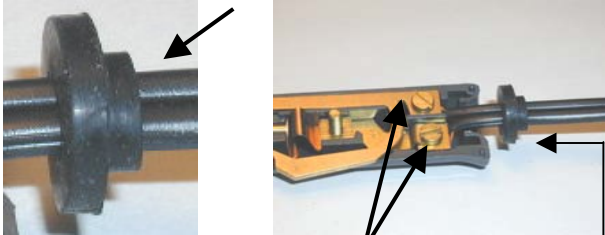

 7. Loosen brass screws 3-4 turns.
8. Determine polarity connections for your application
9. Slide wire ends into openings on underside of terminals
9. Tighten screws to clamp wires << do not over tighten >>
10. Slide flange toward terminals and into housing.
11. Lift wires & use a pointer to press flange into housing.

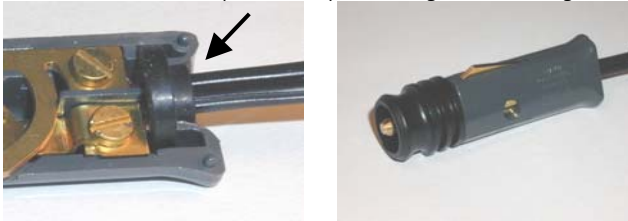

12. Check terminals and connections
13. Reassemble plug body, tighten split screw nut
14. Grip housing, not wires, when unplugging from vehicle
15. Connect only to fused power supply
16. Do not exceed 18 amps, 12VDC

BestRest Products, LLC
6908 220th St. SW
Mountlake Terrace, WA 98043
(425) 673-1023
www.bestrestproducts.com

 
Universal 12 Volt Outlet

Fits BMW style outlet when ring is removed
Fits cigarette lighter outlet when ring is in place


1. Remove adaptor ring
2. Loosen split screw nut only



3. DO NOT LOOSEN SLOTTED SCREW
4. Gently separate plug halves. Do not misplace the split nut!
5. Strip wires $\frac{1}{8}$ "; solder or tin wire strands if desired
6. Strain relief (wire opening) is adjustable. If small strain relief is desired, slide rubber flange onto both wires **FIRST**.

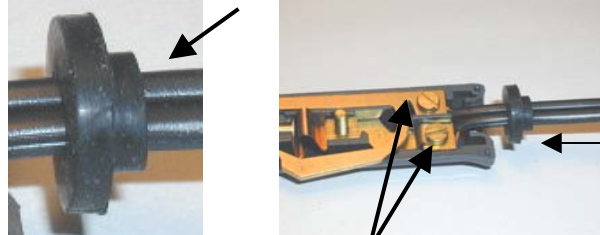

 7. Loosen brass screws 3-4 turns.
8. Determine polarity connections for your application
9. Slide wire ends into openings on underside of terminals
9. Tighten screws to clamp wires << do not over tighten >>
10. Slide flange toward terminals and into housing.
11. Lift wires & use a pointer to press flange into housing.

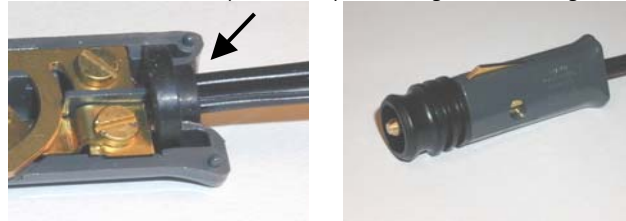


12. Check terminals and connections
13. Reassemble plug body, tighten split screw nut
14. Grip housing, not wires, when unplugging from vehicle
15. Connect only to fused power supply
16. Do not exceed 18 amps, 12VDC

BestRest Products, LLC
6908 220th St. SW
Mountlake Terrace, WA 98043
(425) 673-1023
www.bestrestproducts.com


Universal 12 Volt Outlet

Fits BMW style outlet when ring is removed
Fits cigarette lighter outlet when ring is in place

 
1. Remove adaptor ring
2. Loosen split screw nut only

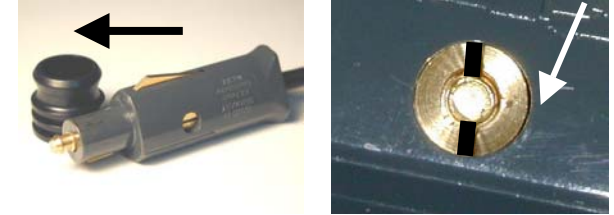

 3. DO NOT LOOSEN SLOTTED SCREW
4. Gently separate plug halves. Do not misplace the split nut!
5. Strip wires $\frac{1}{8}$ "; solder or tin wire strands if desired
6. Strain relief (wire opening) is adjustable. If small strain relief is desired, slide rubber flange onto both wires **FIRST**.

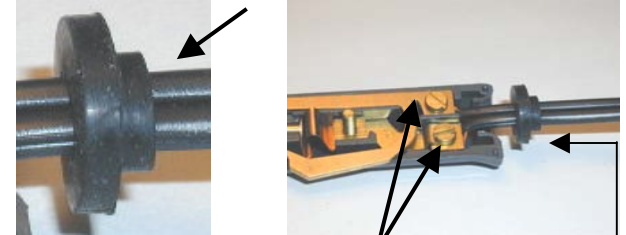

 7. Loosen brass screws 3-4 turns.
8. Determine polarity connections for your application
9. Slide wire ends into openings on underside of terminals
9. Tighten screws to clamp wires << do not over tighten >>
10. Slide flange toward terminals and into housing.
11. Lift wires & use a pointer to press flange into housing.

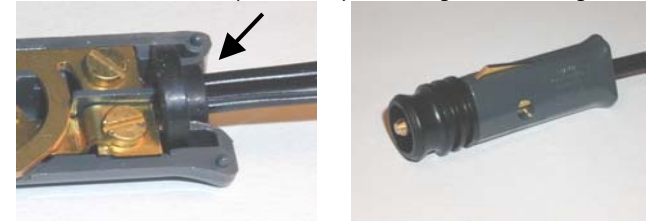

12. Check terminals and connections
13. Reassemble plug body, tighten split screw nut
14. Grip housing, not wires, when unplugging from vehicle
15. Connect only to fused power supply
16. Do not exceed 18 amps, 12VDC

BestRest Products, LLC
6908 220th St. SW
Mountlake Terrace, WA 98043
(425) 673-1023
www.bestrestproducts.com